




VI



VIBO
Wire processing

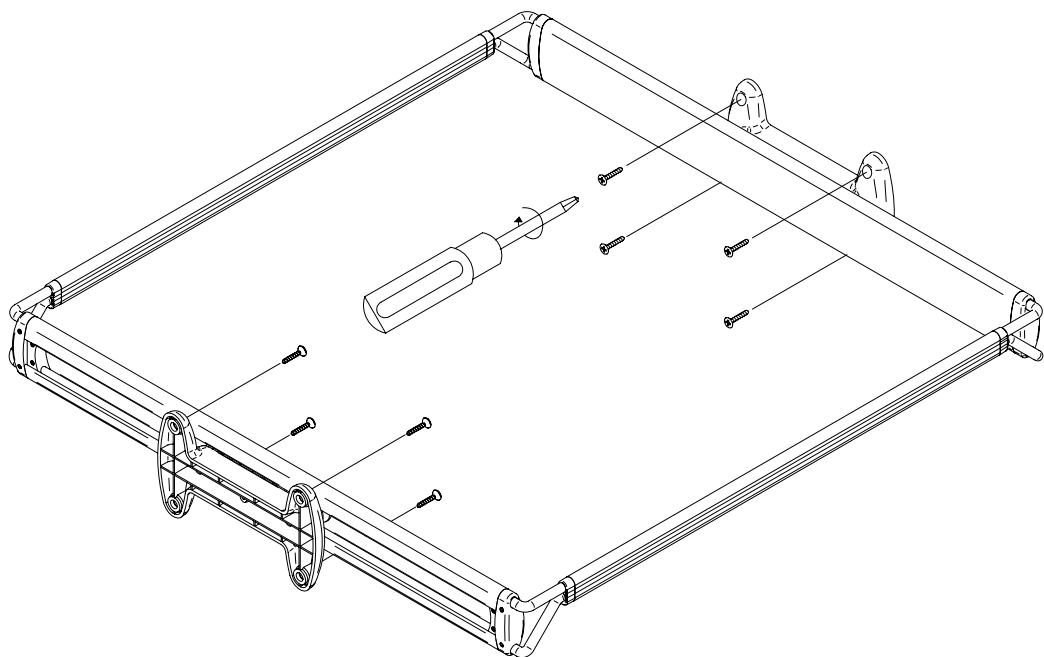


Via Arzignano, 46
36070 Trissino (VI) Italia
Tel: +39 0445 492800
Telefax: +39 0445 492999
Web: <http://www.viboitaly.com>
E-mail: vibo@viboitaly.com

Sequenza di montaggio


Assembly procedure
Séquence de montage
Secuencia de montaje
Schrittweiser Einbau
Monteringssekvens
Monteringsrækkefølge

AT41/55ALGS 14"
AT55/69ALGS 14"
AT69/83ALGS 14"
AT83/97ALGS 14"
AT97/110ALGS 14"

AT41/55ALGS
AT55/69ALGS
AT69/83ALGS
AT83/97ALGS
AT97/110ALGS

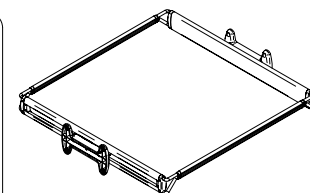


I

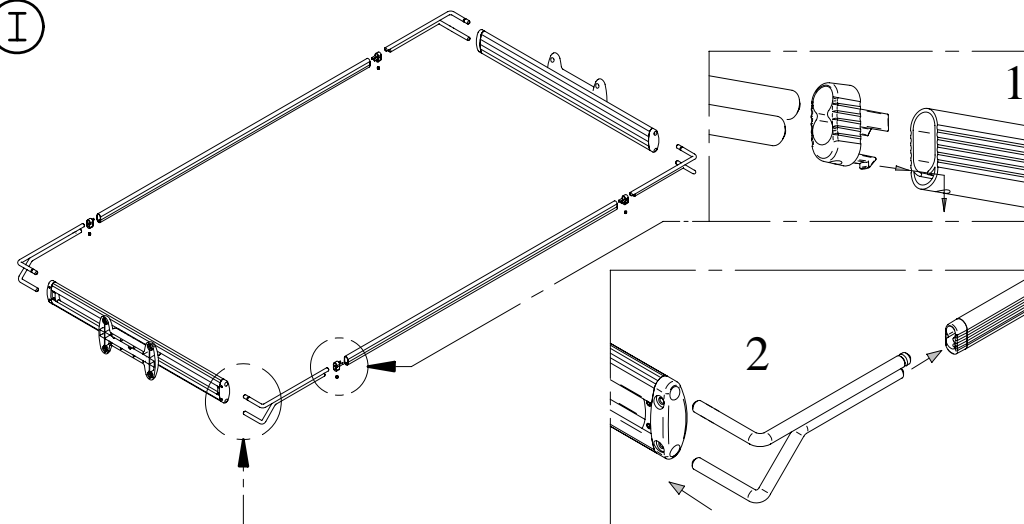

II

Retro
Back
Arrière
Parte posteriorio
Rückseite
Bak
Bagside

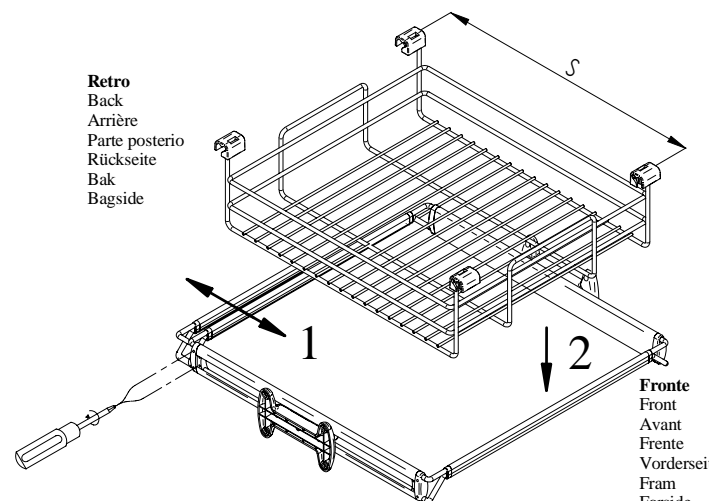


Fronte
Front
Avant
Frente
Vorderseite
Fram
Forside




III

Retro
Back
Arrière
Parte posterior
Rückseite
Bak
Bagside

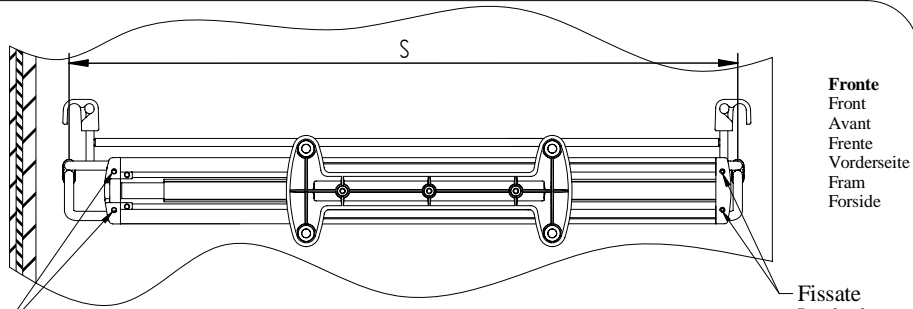


Fronte
Front
Avant
Frente
Vorderseite
Fram
Forside

Allentate
Unlocked
Desserrer
Aflojar
Gelockert
Lossnade
Løsne

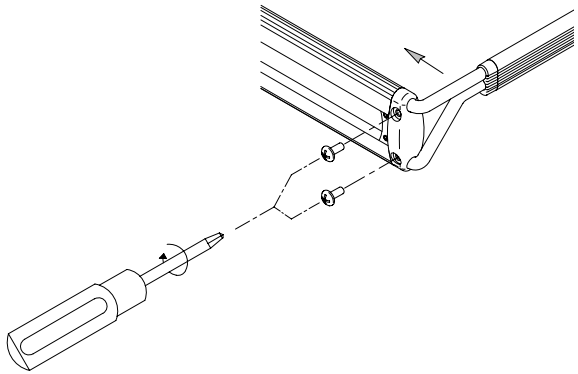


Fissate
Locked
Fixer
Fijjar
Fixiert
Átdragna
Fastgøre

IV

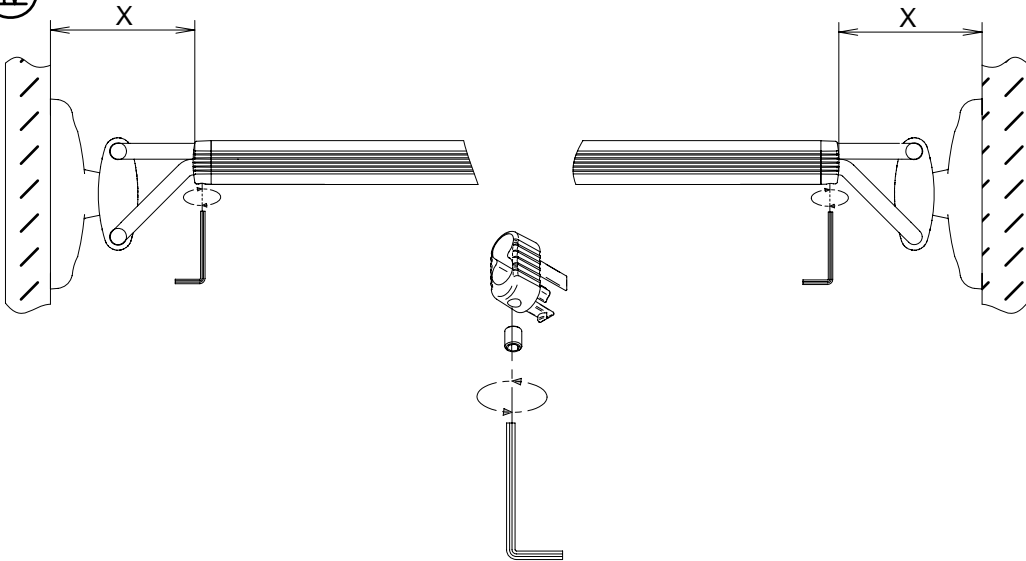


V

Retro
Back
Arrière
Parte posterior
Rückseite
Bak
Bagside

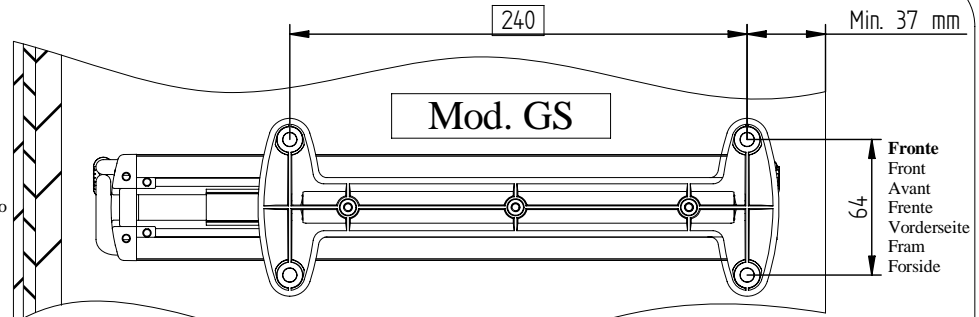

Fronte
Front
Avant
Frente
Vorderseite
Fram
Forside

Retro
Back
Arrière
Parte posterior
Rückseite
Bak
Bagside

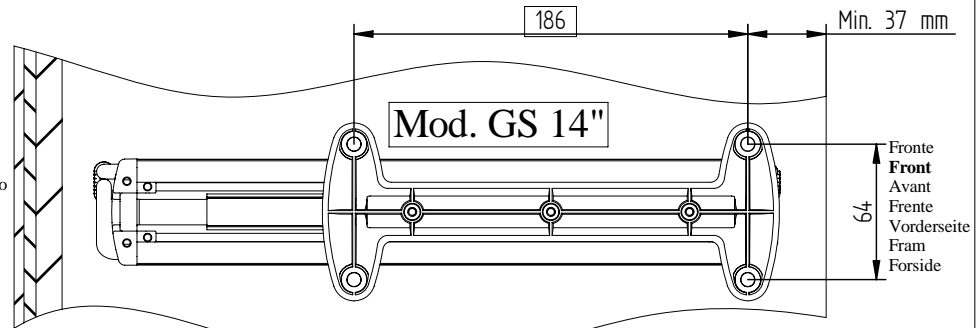

Fronte
Front
Avant
Frente
Vorderseite
Fram
Forside

